MOUNTING INSTRUCTIONS

HOOKS GRADES 80 AND 100









Sling hooks with eye TWN 0855/1 TWN 0858/1 TWN 1841/1



Foundry hooks TWN 0859 TWN 0856 TWN 1856



Swivel hooks TWN 0854



Lifting hook for engines TWN 0889





The following mounting instructions must always be followed to avoid the risk of personal injury or property damage.

Do not use a hook before reading these mounting instructions.

ABOUT THIS INSTRUCTION

These mounting instructions describes in particular how sling hooks according to TWN 1340/1, TWN 1840/1, TWN 0855/1, TWN 0858/1, TWN1841/1, TWN 0859, TWN 0856, TWN 1856, TWN 0854, TWN 0889 (TWN = THIELE Factory Standard) are to be safely used for lifting purposes.

The instruction applies analogously to components of identical design.

To comply with these instructions is essential to help avoid hazards and increases the reliability and service life of the hooks.











DANGER! Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING! Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION! Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE! Is used to address practices not related to physical injury.

Safety Instructions signs indicate specific safety-related instructions or procedures.

Chains and accessories marked with the American nominal size 7/32" already corresponded to European nominal size 6 mm. In order to achieve a better match, the previous nominal size 7/32" is now converted to the new nominal size 1/4".

The working load limits have now also been adjusted.

DEFINITIONS

Clevis

A U-shaped fitting with pin.

Working load limit (WLL)

The maximum load which a hook is designed to support without shock-loading.





Read ASME B30.10 "Hooks".

2. BASIC SAFETY REQUIREMENTS





To prevent the risk of injury never walk or stay under lifted loads!

The working load limit must not be exceeded!

Hooks as well as lifting and attachment means to be used must be free from defects!

Working under the influence of drugs, medications impairing the sense and/or alcohol is strictly forbidden!

SAFETY INSTRUCTIONS

- Operators, fitters and maintenance personnel must in particular observe the mounting and operating instructions of the chain slings into which the hooks are to be installed as well as standards ASTM A 906/A 906 M (Standard Specification for Grade 80 and Grade 100 Alloy Steel Chain Slings for Overhead Lifting), ASTM A 952/A 952 M (Standard Specification for Forged Grade 80 and Grade 100 Steel Lifting Components and Welded Attachment Links), ISO 3056 (Noncalibrated round steel link lifting chain and chain slings; Use and maintenance), ISO 7593 (Chain slings assembled by methods other than welding; Grade T(8)) and ISO 4778 (Round steel short link chains for lifting purposes Chains slings of welded construction Grade 8), ISO 1837 Lifting hooks Nomenclature.
- The specific safety and operating regulations and standards issued locally in the country where the items are used must be observed.
- <u>During operation work, wear your personal protective</u> <u>equipment!</u>

B11090-D

US 01.2025

MOUNTING INSTRUCTIONS

HOOKS GRADES 80 AND 100



SAFETY INSTRUCTIONS

- The directions given in these mounting instructions and specified documentations relating to safety, assembly, operation, inspection, and maintenance must be made available to persons operating and using the hooks.
- These mounting instructions must be available in a place near the product during the time the equipment is used.
 Please contact the manufacturer if replacements are needed. Also see chapter 11.
- Improper assembly and use may cause personal injury and/or damage to property.
- Assembly and removal as well as inspection and maintenance must exclusively be carried out by skilled, qualified, trained and authorized persons only.
- Structural changes are impermissible (e.g. welding, bending).
- Operators must carry out a visual inspection and, if necessary, a functional test of the safety equipment before each use.
- Never use worn-out, bent or damaged hooks.
- Only lift loads that do not exceed the working load limit of the corresponding chain sling.
- Never expose hooks to loads exceeding the specified working load limit.
- Do not use force when mounting/positioning the hooks.
- No one including you (operator) must be in the way of the moving load (hazard area).
- Do not tip-load a hook.
- Hooks shall have well-functioning safety latches.
- Avoid bending loads to act on chain links and hooks.
- Avoid sharp edges. Use edge protectors or reduce the WLL by 20 %.
- Only lift loads that are freely movable and not attached or fastened.
- Always monitor a suspended load.
- During lifting your hands or other body parts must not come into contact with lifting means. Only remove lifting means manually (use your hands).
- Avoid shock loads, e.g. due to abruptly lifting loads with chain in slack condition.
- Usage without working safety elements (cotter pins, dowel pins) is not permissible.
- Make sure the load can take the forces to be applied without suffering deformation.
- Hooks must be allowed to move freely in all tensile directions.
- Put the load only down in flat places/sites where it can be safely deposited.
- Avoid hooks to get caught under the load.
- In the event of doubts or concerns about the proper and safe use, inspection, maintenance or similar things contact your safety officer or the manufacturer.

THIELE is not responsible for damage caused by nonobservance of the instructions, rules, standards and notes indicated!

As regards grade 100, THIELE does not give its approval to the assembly of components sourced from different manufacturers!

As a rule, hooks and chain slings are not permitted for the transportation of persons.

DESCRIPTION AND INTENDED USE

THIELE hooks are exclusively intended as end fittings for the usage in chain slings according to ASTM A 906/A 906M.

The connection to the sling chain is made directly by the clevis or indirectly by using connecting links which are assembled to the eye.

Hooks with eye can also be used within welded chain slings.



Hooks must exclusively be used

- within the limits of their permissible working load limits,
- for permissible attachment methods and sling angles,
- within the temperature limits prescribed,
- by trained and authorized persons.

Failure to do so may cause serious injury or property damage.

THIELE hooks meet EC Machinery Directive 2006/42/EC requirements and feature a safety factor of at least 4 based on the working load limit.

THIELE hooks are designed to withstand 20 000 dynamic load changes under maximum load conditions. In the event of higher loads (e.g. multi-shift/automatic operation) the working load limit must be reduced.

They are marked with the corresponding chain size, grade, manufacturer's symbol and traceability code.

THIELE hooks with safety latch (except TWN 0889) can also be used for lashing. If the hooks are used **exclusively** for lashing, the maximum lashing capacity (LC) is calculated by doubling the working load limit to LC = 2 x WLL.#

Alternating use for lifting and lashing is only permitted up to the load corresponding to the working load limit (WLL), i.e. LC = WLL!#

Even a single lashing load above the working load limit (LC > WLL) makes further use as a hook for lifting impermissible.#

B11090-D

US 01.2025



4. COMMISSIONING

Prior to using the components for the first time assure that

- the hooks comply with the order and have not been damaged,
- test certificates and mounting instructions are at hand,
- markings correspond with what is specified in the documentation,
- inspection deadlines and the qualified persons for examinations are determined,
- visibility and functional testings are carried out and documented,
- documentation is safely kept in an orderly manner.


Dispose of the packing in an environmentally compatible way according to local rule.

5. TECHNICAL DATA

Tables include only article numbers of standard and not customized parts.

5.1 Sling hooks with clevis, TWN 1340/1, grade 80


Versions according TWN 1340 without safety latch not listed.

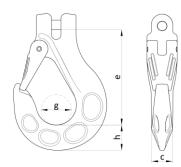

Nominal	Article	WLL	Di	mensio	ons [ind	ch]	Mass
size	no.	[lbs]	С	e	g	h	[lbs]
1/4	F336010	2 500	0.67	2.95	0.94	0.79	0.79
5/16	F336110	4 500	0.87	3.62	1.18	0.98	1.68
3/8	F336210	7 100	1.10	4.49	1.46	1.26	3.11
1/2	F336310	12 000	1.38	5.24	1.65	1.61	5.45
5/8	F336410	18 100	1.65	6.38	2.01	1.97	9.79
3/4	F336510#	28 300	2.17	8.66	2.56	2.28	18.89
7/8	F336610#	34 200	2.40	9.61	2.76	2.52	25.26

5.2 Sling hooks with clevis, TWN 1840/1, grade 100


Versions according TWN 1840 without safety latch not listed.

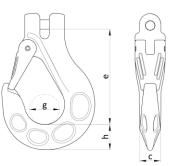

Nominal	Article	WLL	Di	mensio	ons [ind	ch]	Mass
size	no.	[lbs]	С	e	g	h	[lbs]
1/4	F336050	3 100	0.67	2.99	0.79	0.79	0.79
9/32#	F336070	4 300	0.79	3.58	0.94	0.87	1.30
5/16	F336150	5 700	0.87	3.74	1.18	0.98	1.68
3/8	F336250	8 800	1.10	4.49	1.46	1.26	3.11
1/2	F336350	15 000	1.38	5.24	1.65	1.61	5.45
5/8	F336450	22 600	1.65	6.38	2.01	1.97	9.83
3/4#	F336550	35 300	2.17	8.66	2.56	2.28	18.94
7/8#	F33664	42 700	2.17	8.78	2.68	2.44	25.31

5.3 Sling hooks with eye, TWN 0855/1, grade 80

Versions according TWN 0855 without safety latch not listed.

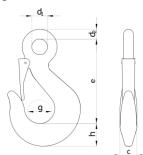


Nominal	Article	WLL		Dimensions [inch]						
size	no.	[lbs]	С	d ₁	d ₂	e	g	h	[lbs]	
1-7/16	Z06159	88 200	3.07	2.83	1.75	15.28	3.54	4.06	71.21	
1-9/16	Z06160	110 200	3.50	3.31	1.99	17.40	4.06	4.57	103.62	
1-3/4	Z06161	138 900	3.90	3.54	2.20	19.45	4.49	5.12	141.98	
2	Z06162	176 400	4.33	4.02	2.48	24.02	5.16	5.71	180.56	



5.4 Sling hooks with eye, TWN 0858/1, grade 80

Versions according TWN 0858 without safety latch not listed.

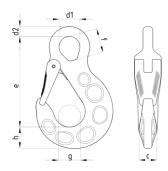


Nom.	Article	WLL		Dimensions [inch]							
size	no.	[lbs]	С	d ₁	d₂	e	f#	g	h	[lbs]	
1/4	F32901	2 500	0.67	0.83 1)	0.43	3.60	-	0.79	0.79	0.79	
5/16	F32911	4 500	0.79	1.10 1)	0.55	4.65	-	1.06	0.98	1.68	
3/8	F32921	7 100	1.10	1.42 1)	0.71	5.75	-	1.34	1.26	3.28	
1/2	F32931	12 000	1.36	1.65 1)	0.83	6.61	-	1.61	1.61	5.60	
5/8	F32941	18 100	1.61	2.13 1)	0.98	8.27	-	1.89	1.97	10.23	
3/4	F329510	28 300	2.01	2.28 1)	1.06	9.61	-	2.32	2.28	16.78	
7/8	F329710 ¹⁾	34 200	2.20	2.56 1)	1.18	10.67	-	2.68	2.44	22.49	
1	F329810 ¹⁾	47 700	2.36	2.76	1.30	11.89	3.19	2.91	2.76	33.07	
1-1/4	F329910 ¹⁾	72 300	2.76	2.99	1.73	13.78	3.98	3.54	3.31	55.34	

¹⁾ with circular eyelet#

5.5 Sling hooks with eye, TWN 1841/1, grade 100


Versions according TWN 1841/1 without safety latch not listed.

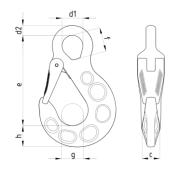

Nominal	Article	WLL		Dimensions # [inch]						
size	no.	[lbs]	С	d ₁	d ₂	e	f	g	h	[lbs]
1/4	F32905	3 100	0.67	0.83 1)	0.43	3.60	-	0.79	0.79	0.79
9/32, 5/16	F32915	5 700	0.79	1.10 1)	0.55	4.65	-	1.06	0.98	1.68
3/8	F32925	8 800	1.10	1.42 1)	0.71	5.75	-	1.34	1.26	3.28
1/2	F32935	15 000	1.38	1.65 1)	0.83	6.61	-	1.61	1.61	5.60
5/8	F32945	22 600	1.61	2.13 1)	0.98	8.27	-	1.89	1.97	10.23
3/4	F32965	35 300	2.01	2.28 1)	1.06	9.61	-	2.32	2.28	16.78
7/8	F32975	42 700	2.20	2.56 1)	1.18	10.67	-	2.68	2.44	22.49
1	F32985	59 700	2.36	2.76	1.30	11.89	3.19	2.91	2.76	33.07
1-1/4	F32995	90 400	2.76	2.99	1.73	13.78	3.98	3.54	3.31	55.34


¹⁾ with circular eyelet#

5.6 Foundry hooks with clevis, TWN 0859, grade 80

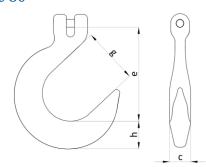

Article	WLL	Din	nensio	ch]	Mass	
no.	[lbs]	С	e	g	h	[lbs]
F33310	4 500	1.06	4.33	2.60	1.30	2.47
F33320	7 100	1.26	5.24	2.99	1.38	3.55
F33330	12 000	1.50	6.26	3.50	1.61	7.50
F33340	18 100	1.77	7.44	4.02	1.89	12.13
F33655	28 300	2.01	8.54	4.49	2.13	19.84
F33660	34 200	2.20	9.61	4.88	2.36	26.46
	F33310 F33320 F33330 F33340 F33655	no. [lbs] F33310 4 500 F33320 7 100 F33330 12 000 F33340 18 100 F33655 28 300	F33310 4 500 1.06 F33320 7 100 1.26 F33330 12 000 1.50 F33340 18 100 1.77 F33655 28 300 2.01	no. [lbs] c e F33310 4 500 1.06 4.33 F33320 7 100 1.26 5.24 F33330 12 000 1.50 6.26 F33340 18 100 1.77 7.44 F33655 28 300 2.01 8.54	no. [lbs] c e g F33310 4 500 1.06 4.33 2.60 F33320 7 100 1.26 5.24 2.99 F33330 12 000 1.50 6.26 3.50 F33340 18 100 1.77 7.44 4.02 F33655 28 300 2.01 8.54 4.49	no. [lbs] c e g h F33310 4 500 1.06 4.33 2.60 1.30 F33320 7 100 1.26 5.24 2.99 1.38 F33330 12 000 1.50 6.26 3.50 1.61 F33340 18 100 1.77 7.44 4.02 1.89 F33655 28 300 2.01 8.54 4.49 2.13

5.7 Foundry hooks with eye, TWN 0856, grade 80

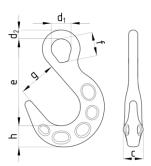


Nom.	Article	WLL	Dimensions [inch]							Mass
size	no.	[lbs]	С	d ₁	d ₂	e	f	g	h	[lbs]
1/4	F32354	2 500	0.79	0.83 1)	0.47	4.25	-	1.97	0.94	0.97
9/32, 5/16	F32364	4 500	1.02	1.10 1)	0.55	5.31	-	2.60	1.30	2.14
3/8	F32374	7 100	1.28	1.26 1)	0.71	6.34	-	2.99	1.38	3.44
1/2	F32384	12 000	1.50	1.65 1)	0.83	7.72	-	3.50	1.65	6.53
5/8	F32394	18 100	1.77	2.13 1)	0.91	9.02	-	4.02	1.89	10.38
11/16, 3/4	F32404	28 300	2.30	2.32	1.06	10.20	2.76	4.49	2.48	17.53
7/8	F32414	34 200	2.56	2.56	1.18	11.34	3.07	5.00	2.76	24.03
1	F32424	47 700	2.95	2.99	1.38	12.95	3.50	5.35	3.19	36.38
1-1/4	F32444	72 300	3.27	3.35	1.65	14.09	3.94	5.98	3.82	57.76

¹⁾ with circular eyelet

US 01.2025




5.8 Foundry hooks with eye, TWN 1856, grade 100#

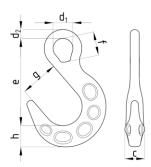

Nom.	Article	WLL		Dimensions [inch]						
size	no.	[lbs]	С	d ₁	d ₂	e	f	g	h	[lbs]
1/4	F32353	3 100	0.79	0.83 1)	0.47	4.25	-	1.97	0.94	0.97
9/32, 5/16	F32363	5 700	1.02	1.10 1)	0.55	5.31	-	2.60	1.30	2.14
3/8	F32373	8 800	1.28	1.26 1)	0.71	6.34	-	2.99	1.38	3.44
1/2	F32383	15 000	1.50	1.65 1)	0.83	7.72	-	3.50	1.65	6.53
5/8	F32395	22 600	1.77	2.13 1)	0.91	9.02	-	4.02	1.89	10.38
11/16, 3/4	F32405	35 300	2.30	2.32	1.06	10.20	2.76	4.49	2.48	17.53
7/8	F32413	42 700	2.56	2.56	1.18	11.34	3.07	5.00	2.76	24.03
1	F32423	59 700	2.95	2.99	1.38	12.95	3.50	5.35	3.19	36.38
1-1/4	F32443	90 400	3.27	3.35	1.65	14.09	3.94	5.98	3.82	57.76


¹⁾ with circular eyelet

5.9 Swivel hooks, TWN 0854, Grade 80

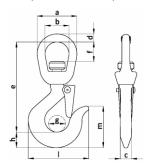

Nom.	Article	WLL	Dimensions # [inch]								Mass		
size	no.	[lbs]	а	b	С	d	е	f	g	h	1	m	[lbs]
0.75 t	F32103	1 650	1.97	1.18	0.51	0.39	4.47	0.98	0.75	0.55	2.46	1.67	0.82
1/4	F32100	2 500	1.97	1.18	0.55	0.39	4.45	0.98	0.71	0.79	2.87	2.05	0.84
5/16	F32110	4 500	2.99	1.73	0.75	0.63	6.10	1.65	0.83	0.98	3.46	2.40	2.20
13/8	F32120	7 100	2.99	1.73	0.83	0.63	6.38	1.65	0.91	1.18	4.09	2.83	2.65
1/2	F32130	12 000	3.50	2.01	1.10	0.75	7.48	1.69	1.26	1.30	4.84	3.43	4.59
5/8	F32140	18 100	4.49	2.52	1.38	0.98	9.72	2.40	1.57	1.69	6.14	4.33	9.81

5.10 Lifting hook for engines, TWN 0889, grade 80

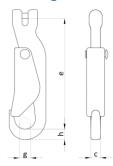

Nom.	Article	Nom. Diameter	WLL	Din	Mass			
size	no.	[inch]	[lbs]	С	e	g	h	[lbs]
1/4	F33439	0.236	1 100	0.47	5.39	0.75	0.51	1.21

6. ASSEMBLY AND REMOVAL

6.1 Preparations

All components to be installed or used must be in perfect condition and the relevant working load limits of all parts must accommodate the respective load to be handled.

6.2 Clevis fastening system

The clevis fastening system only permits attachment of the nominal chain size that suits the attachment component.



- If necessary, remove dowel pin and pin.
- (A) Place end of chain leg between the lateral clevis elements.
- (B) Push pin from the side fully into the clevis and through the last chain link of the leg.
- (C) Drive dowel pin fully in (must not project) to secure the pin. The slot must face away from the pin.



Check whether the chain runs smoothly.


The dowel pins must only be installed once.

Only connect pins and attachment components of identical grades. Starting with \emptyset ½" the pins are marked on the front end.

6.2.2 DISASSEMBLY

- Slacken the respective chain leg.
- (A) Drive dowel pin out using hammer and drift punch ¹⁾.
- (B) Push pin out using a drift punch.
- (C) Remove the chain.
- 1) Suitable drift punches are available by article no. Z03303.



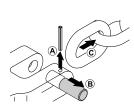

HOOKS GRADES 80 AND 100



6.3 Safety latch

Disassembly by driving the dowel pins out.

Assembling by correct positioning of safety latch together with spring and driving in the thicker dowel pin by a hammer. Afterwards the thinner dowel pin has to be driven in, taking care that the slots positioned adverse. Check the correct operability of the safety latch.

7. CONDITIONS OF USE

7.1 Normal use



Hooks must always be freely movable when attached to the load and must not rest on or be supported by other structural parts.

When using hooks without safety latches, e.g. due to operational necessities, special care is to be taken, and a separate risk analysis must be prepared.

7.2 Influence of temperature



Using hooks at elevated temperatures will cause the working load limit to be reduced as indicated below.

Grade	Temper	ature	Remaining WLL	
	-40 °C -40 °F			100 %
80	205 °C 400 °F			90 %
	300 °C 572 °F			75 %
100	-40 °C -40 °F			100 %



If a hook has been exposed to temperatures exceeding the maximum values specified, it must not be used furthermore.

7.3 Environmental influence



Hooks must not be used in environments where acids, aggressive or corrosive chemicals or their fumes are present. Hot-dip galvanizing or a galvanic treatment is prohibited. Hooks with clevis are not intended to be used for abrasive blasting environments.

8. SPARE PARTS



Use only original spare parts.

8.1 Spare part sets safety latches

Sets consist of safety latch, spring and dowel pins.

Grade TWN 08 TWN 08 TWN 13	335/1 358/1	Grade 100 TWN 1835/1 TWN 1840/1 TWN 1841/1				
Nominal size	Article no.	Nominal size	Article no.			
1/4	F48730	1/4	F48731			
5/16	F48732	5/16	F48733			
3/8	F48734	3/8	F48735			
1/2	F48736	1/2	F48737			
5/8	F48738	5/8	F48739			
3/4	F48742	3/4	F48743#			
7/8	F48744	7/8	F48745			
1	F48746	-	-			
1-1/4	F48747	-	-			

8.2 Spare part sets for clevis fastening system

Sets consist of pins and dowel pins.

Grade 80		Grade 100	
Nominal size	Article no.	Nominal size	Article no.
1/4	F48694	1/4	F48686
5/16	F48352	5/16	F48687
3/8	F48355	3/8	F48688
1/2	F48358	1/2	F48689
5/8	F48361	5/8	F48690
3/4	F48369	-	-
7/8	F48367	-	-



INSPECTION, MAINTENANCE, DISPOSAL



<u>Inspections and maintenance must be arranged by the owner!</u>
<u>Inspection intervals must be determined by the owner!</u>

Visual inspections must be regularly carried out and documented by competent and trained persons, at least once a year or more frequently if the hooks are in heavy duty service. After three years at the latest they must additionally be examined for cracks. A load test is not a substitute for this examination.

The results of the inspection shall be kept in a file that has to be set up for each chain sling before first use. The register shall show characteristic data of the chain slings and components as well as identity details.

Immediately stop using hooks that show the following defects:

- · missing or illegible identification/marking,
- deformation, elongation or fractures,
- · cuts, notches, cracks, incipient cracks, pinching,
- · heating beyond permissible limits,
- severe corrosion,
- broken springs,
- not sufficient working safety devices,
- wear in excess of 10 %, e.g. in the receiving area of the pin diameter,
- missing or damaged pin locks or removal preventing guards.



Cleaning (e.g. prior to inspections) must not take place by using flames or methods that might cause hydrogen embrittlement (e.g. pickling or immersion in acidic solutions).

9.1 Inspection service

THIELE offers inspection, maintenance and repair services performed by trained and competent personnel.

9.2 Maintenance



Maintenance and repair work must only be performed by competent and trained persons.

Minor notches and cracks may be eliminated by careful grinding observing the maximum cross section reduction requirement of max. 10 % and avoid making more severe cuts or scores.

All maintenance and repair activities must be documented properly.

9.3 Disposal

NOTICE

All steel components and accessories taken out of service must be scrapped in accordance with local regulations and provisions.

10. STORAGE

NOTICE

Hooks must be stored properly sorted and in dry conditions at temperatures between 41 $^{\circ}F^{\#}$ and 104 $^{\circ}F$.

Do not store in a manner that cause mechanical damage.

11. THIELE OPERATING AND MOUNTING INSTRUCTIONS

NOTICE

Current mounting and operating instructions are available as a PDF download on the THIELE-website www.thiele.de.



12. PUBLISHING INFORMATION

Company	KWS Inc.	THIELE GmbH & Co. KG
	(Distributor)	(Manufacturer)
Postal address	P.O. Box 470487 Tulsa, OK 74147	Werkstrasse 3 58640 Iserlohn
	USA	Germany
Phone number	+1 (539) 367 2274	+49 2371/947-0
Fax number	+1 (539) 367 2278	+49 2371/947-241
Email	sales@kwschain.com	info@thiele.de